
# ED07 - EDEN COFFEE TABLE Assembly Instructions

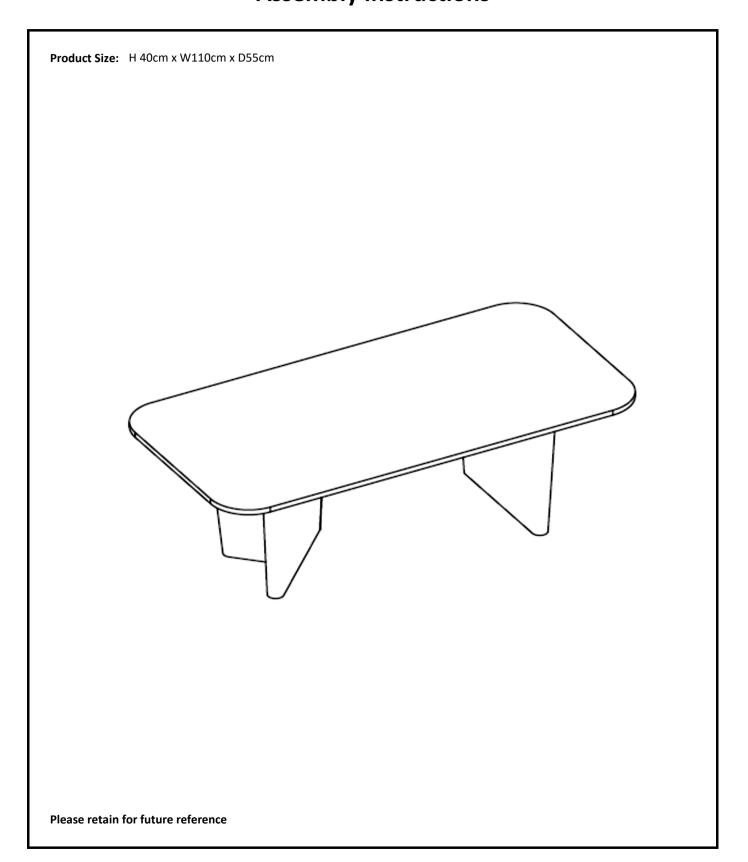

# ED07 - EDEN COFFEE TABLE

### **Assembly Instructions**

### **Before You Start**

#### Warnings

Please retain these instructions for future reference.

> Keep fittings out of children's reach and keep children well away from the assembly area.

> Ensure that this product is only used on firm, level ground.

> Periodically check all fittings and re-tighten as necessary.

> Do not sit or stand on your furniture.

> Avoid exposing the furniture to excessive heat or direct sunlight, as this can cause deterioration of the colour.

> Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing.

#### Number of People Required to Assemble

2 persons are required to assemble this item.

#### Time to Assemble

Approximately 20 minutes required to assemble this item.

#### **Tools required**



**Missing Parts or Issues** 

If you have any problems, please don't hesitate to get in touch with your retailer directly.

#### Do

> Spend a short time reading through this leaflet before you start.

> When you are ready to start, make sure that you have the right tools and plenty of space.

> Unwrap all packaging materials and place components on a clean surface to protect them from damage.

> The packaging should be used to protect the product during assembly.

> Carefully check that you have all parts before beginning assembly.

> tThe furniture should be assembled in the room that it is intended to be used in.

> Ensure the product is fully assembled as shown, and that all fixings are fully tightened before use.

> Wipe occasionally with a soft cloth slightly dampened with water, then buff with a dry clean soft cloth.

#### Don't

> Do not drag or pull your furniture.

> Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish.

> Never allow any kind of liquid to remain on your furniture.

> Absorption can cause wood to warp or finishes to delaminate.

> Do not place hot items (e.g. hot drinks) directly on to the surface. Make sure you always use a placemat or coaster.

# ED07 - EDEN COFFEE TABLE Assembly Instructions

### **Getting to Know your Product**

Components supplied. Please use this guide if you require replacement parts.

#	Dimensions	Visual	Qty	Ctn
А	H3cm X W110cm X D55cm		1pc	
В	H37cm X W41cm X D5cm		1pc	
С	H37cm X W41cm X D5cm		1pc	
D	H37cm X W18cm X D5cm		1pc	

### **Fixtures and Fittings**


Main Fixtures and Fittings Supplied (10 Scale)													
Ref	Dimensions	Qty	mm	10	20	30	40	50	60	70	80	90	100
1	M6x20	24											
2	(M8x16	20		0	)								
Other Fixtures and Fittings Supplied (Not To Scale)													
Ref	Dimensions	v	isual	Qty									

#### Main Fixtures and Fittings Supplied (To Scale)

Ref	Dimensions	Visual	Qty
3	4MM		1
4	25x50MM	60	2


### ED07 - EDEN COFFEE TABLE

### **Assembly Instructions**

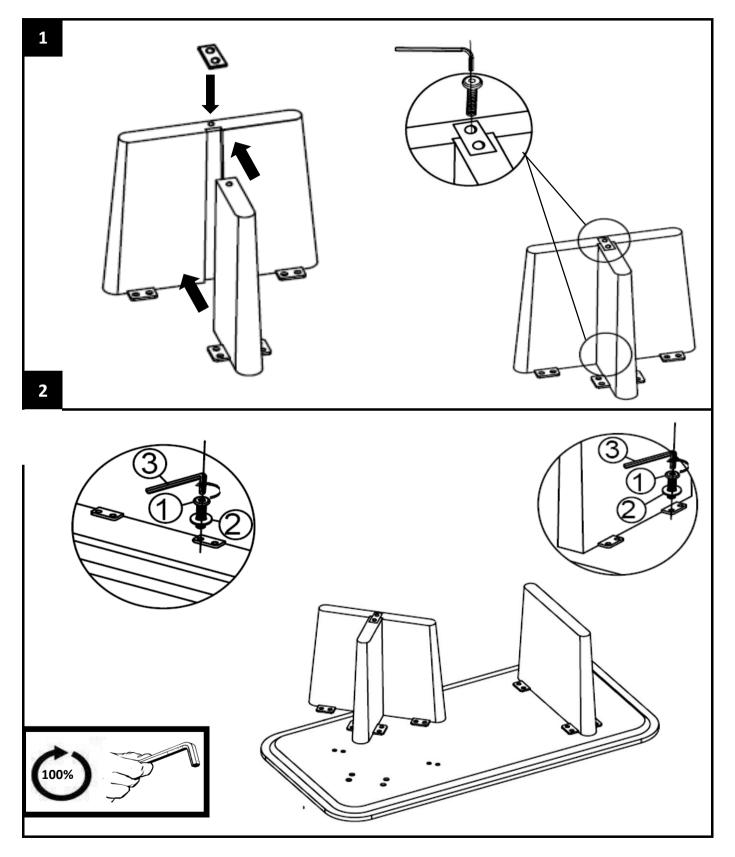

# ED07 - EDEN COFFEE TABLE

### **Assembly Instructions**

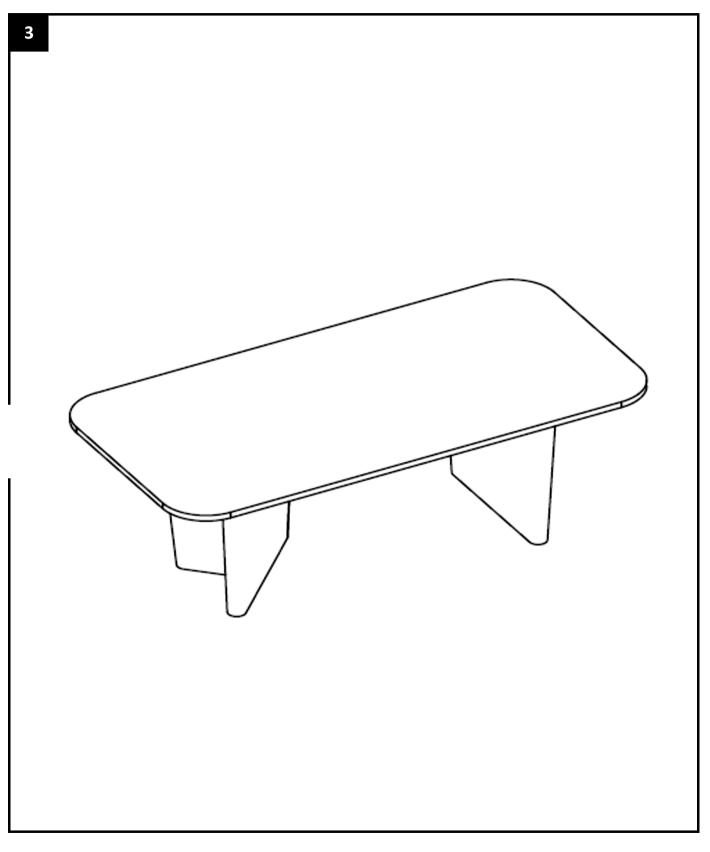

## ED07 - EDEN COFFEE TABLE Care Guide

